

INSTALLATION, SERVICE AND MAINTENANCE INSTRUCTIONS

C-TOP control head



INOXPA, S.A. c/Telers, 54 Aptdo. 174 E-17820 Banyoles Girona (Spain) Tel. : (34) 972 - 57 52 00 Fax. : (34) 972 - 57 55 02 Email: inoxpa@inoxpa.com www.inoxpa.com



Original Manual 10.420.30.00EN_RevB ED. 2010/11



Declaration of Incorporation

The manufacturer: **INOXPA, S.A.** c/ Telers, 57 17820 Banyoles (Girona), Spain

herewith declares that the machine:

C-TOP Control Head

with the serial number: _____

conforms to the relevant provisions of the following directives:

Low voltage Directive 2006/95/EC Electromagnetic Compatibility Directive 2004/108/EC

It also declares that the technical documentation for this partly completed machinery has been developed in compliance with Appendix VII Section B and it agrees to issue this documentation as and when required by the national authorities.

The aforementioned partly completed machinery shall NOT be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the Machinery Directive, as required by Appendix II A.

Identification of the person empowered to draw up the Declaration on behalf of the manufacturer, and qualified to compile the technical file established by the Community:

Banyoles, 8 January 2014

David Reyero Brunet Technical Office Manager



Danger of injury caused by rotating parts

Danger to the proper operating of the

of the equipment.

machine.

1. Safety

1.1. INSTRUCTION MANUAL

This instruction manual contains the basic instructions that must be followed during installation, commissioning and maintenance work.

The information given herein is based on the most up-to-date data available.

INOXPA reserves the right to modify this instructions manual without having to give prior notice.

1.2. COMISSIONING INSTRUCTIONS

This instruction manual contains both essential and useful information in order that your valve be properly handled and maintained.

Not only should the safety instructions set forth in this chapter be obeyed, but all those special measures and recommendations that have been added to other chapters herein must also be observed. It is extremely important that these instructions be kept in a set place near the installation.

1.3. SAFETY

1.3.1. Warning signs



Danger for people in general



Danger! Electricity



Obligation to ensure safety at work.

1.4. GENERAL SAFETY INSTRUCTIONS



Please read the instruction manual carefully before installing and commissioning the control head. Should you have any doubts or queries, contact INOXPA.

1.4.1. During the installation procedure



Your must always bear in mind the *Technical Specifications* set forth in Chapter 8.

The installation and use of the C-TOP control head must always be carried out in accordance with health and safety rules that are to be applied.

Before putting the valve / actuator into operation, check to make sure that it has been correctly assembled and that the shaft has been perfectly aligned. Incorrect alignment and/or excessive force applied during the securing of the control head may give rise to serious mechanical problems in the same.



During the installation procedure, all the electrical work must be carried out by duly authorised personnel.

1.4.2. During operation



You must always bear in mind the *Technical Specifications* set forth in Chapter 8. The limit values that have been set must NEVER be exceeded.

NEVER touch the valve and/or pipes that come into contact with the liquid whenever the valve is in service. If it works with hot products, there is a risk of getting burned.





The valve / actuator has rotating parts. Fit the head with great care, and do not put either hands or fingers on the piston area, or on the indicated areas when this is connected up to the compressed air. Failure to do so could produce serious injuries.



NEVER sprinkle the internal parts of the head with water. Position the cover and secure it with the screws that have been supplied after doing any maintenance work.

1.4.4. **During Maintenance**



You must always bear in mind the *Technical Specifications* set forth in Chapter 8.

NEVER strip the control head if the valve or installation is in service. Make sure that the compressed air supply has been shut off.

Do not leave loose parts on the floor.



All electrical work must be carried out by duly authorised personnel.

1.4.5.

1.4.6. Compliance with the instructions

Any failure to comply with the instructions could endanger the operators, the environment and the machine, and could result in the loss of any rights to claim damages.

Failure to observe these instructions could carry the following risks:

- Serious operational failure of the machine / plant.
- Specific maintenance and fault repair procedures.
- The threat of electrical, mechanical and chemical risks.
- The environment may be endangered by the substances released.

1.5. GUARANTEE

Any guarantee will immediately become fully null and void, and what is more, we will be fully compensated for any civil liability claim made against us by third parties, in the event that:

- The installation and maintenance work has not been carried out in accordance with the instructions set forth in this manual.
- The repairs have not been carried out either by a member of our staff, or have been done without our company having issued prior written authorisation.
- The parts used are not original INOXPA pieces.
- Modifications have been carried out without prior written consent.
- The material has been badly, incorrectly or negligently used, or has not be used in accordance with the instructions and end set forth in this manual.

The general delivery conditions already in your possession also apply

Should you have any doubts or require more in-depth explanations about particular data (adjustments, assembly, stripping...) please do not hesitate to contact us.



2. Table of Contents

1. Safety

	1.1. Instruction manual
	1.2. Comissioning instructions
	1.3. Safety
	1.4. General safety instructions
	1.5. Guarantee
2.	Table of Contents
3.	General Information
	3.1. Description
	3.2. Operating principle
	3.3. Components
4.	Reception and Installation
	4.1. Check the delivery7
	4.2. Delivery and unpacking7
	4.3. Identification
	4.4. Positioning
	4.5. Fitting the head9
	4.6. Electrical connection
	4.7. As-interface electric connection
	4.8. Pneumatic connections
5.	Commissioning
	5.1. Comissioning
	5.2. C-TOP commissioning15
6.	Troubleshooting: Causes and solutions
7.	Maintenance
	7.1. General comments
	7.2. Storage17
	7.3. Cleaning
	7.4. Assembly and stripping17
8.	Technical Specifications
	8.1. Technical specifications
	8.2. CharacterIstics
	8.3. Dimensions
	8.4. Exploded view and parts list



3. General Information

3.1. DESCRIPTION

The **C-TOP** is a pneumatic control head designed to assure the optimum control of INOXPA process valves. It is compatible with the majority of PLC (Programmable Logic Controllers) automated systems, with Digital communication, or with bus (AS-Interface).

It is fitted to the upper part of the pneumatic actuator of the process valve in order to activate and provide remote electrical indication of the operating position of the valve. The indicators can be of two types:

- microswitches (with mechanical contact)
- proximity inductive detectors (without contact)

C-TOP can be fitted with any process valve available in the food, drink and biopharmaceutical industries.

3.2. OPERATING PRINCIPLE


The **C-TOP** is a control head that includes signalling and command devices to control all types of (piston) process valves. This element incorporates the following functions in a single element:

- pneumatic and electrical control of the valve;
- position indicators with feedback
- possibility of communication by (AS-Interface) bus.

It is fitted to the valve's pneumatic drive. It receives signals from a control panel or from a PLC to control the valve, and sends signals to the PLC or control panel in order to indicate its status/position.

Moreover, the **C-TOP**, has 3 signalling LED's providing information as to the status of the valve at all times:

- green led: indicates that the valve is in the ON position
- *red led:* indicates that the valve is in the OFF position
- *yellow led:* indicates that position 3 has been activated (for example: mix-proof valve).

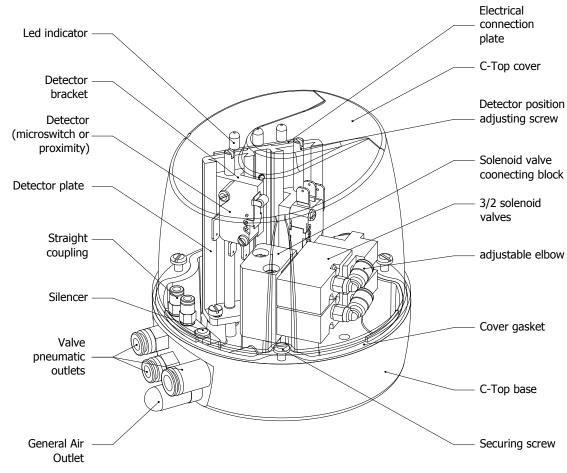

3.3. COMPONENTS



4. Reception and Installation

4.1. CHECK THE DELIVERY

The first thing to do on receiving the head is to inspect it and make sure that it corresponds to the item that is entered on the delivery note.

INOXPA checks all of its equipment before packing. Notwithstanding, it cannot guarantee that the goods in question will arrive at the addressee intact. For this very reason, the item that is received, as well as any other article, must be checked. In the event that the product is not in good condition and/or all the parts have not been received, the haulier must write up a report to this end as soon as possible.

4.2. DELIVERY AND UNPACKING



INOXPA does not accept liability should the head, its component parts and any other part they may be supplied, be improperly unpacked.

4.2.1. Delivery:

Check that all of the parts listed on the delivery note have been received:

- Delivery note.
- Head and a bag with a seal and 2 securing screws.
- Adapter bracket for the pneumatic actuator (whenever it has been ordered).
- Instruction manual.

4.2.2. Unpacking:

- Remove all possible remains of the packing from the equipment.
- Check the head or its constituent parts for possible damage suffered during haulage.

4.3. IDENTIFICATION

All heads are identified with a label. See section 8.2 of the chapter entitled *Technical Specifications* for further information.



4.4. POSITIONING



The purchaser or user will be responsible for assembly, installation, commissioning and operation of the control head.

Position the head in such a way as that after it has been fitted to the valve it can be easily connected up to the compressed air network, and so that there will be no difficulty in making all of the required electrical connections. Furthermore, it is a good idea to position the head in such a was as to make it easy to see the status LED's from a certain distance, in order to be able to check the valve status comfortably. Leave enough space around the valve/actuator so that the inspection of the head, as well as maintenance and stripping operations, can be properly carried out.

It is extremely important to be able to have easy access to the actuator air connection device, even when this is in operation.

The **CTOP** control head possesses the following fitting options:

NEW INSTALLATIONS:

- **INOXPA process valves**. No adapter is required: the head is fitted directly on the upper part of the valve drive.
- **in valves made by other manufacturers.** Easy fitting, all you need to do is to fit an adaptation bracket (See Figure 4.1). In this case, the head position will depend on the type of valve to which it is to be fitted, though normally, it will be fitted to the upper part of the pneumatic drive. (The signal indicator must possess the dimensions that are given in Figure 4.2 and 4.3).



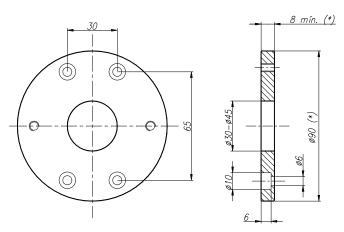


fig. 4.1 (suggested dimensions)

switching knob

38

min.

Ø20max.

Piston in lower end

position

Air actuator

Pieza superior actuador neumático

ш.

Pistón in upper

108

max.

end position

The adapter bracket can be supplied by INOXPA as an accessory, although it may also be made by the purchaser.

The bracket dimensions must be as indicated on the figure shown here. The measurements that are marked with an (*) may vary.

The screw sizes are for DIN 912 M5 allen screws.

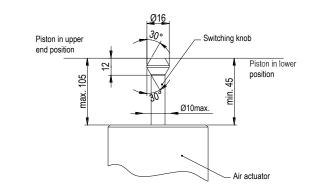


fig. 4.2 For proximity detectors. C-TOP 95690

Ø27-&

fig. 4.3 For microswitches. C-TOP 95691

REPAIR / REPLACING OLD MODELS:

- replacing INOXPA '94 head. Order the SCV1010 assembly kit (for actuators and butterfly/ball check valve) or kit SCN1010 (for multi-way valves) along with the head.
- replacing the Bürkert-model head. Order the SCV1011 assembly kit (for actuators and butterfly/ball check valve) or kit SCN1011 (for multi-way valves) along with the head.



The bracket/adapter must be fitted in such a way as to be properly aligned with the pneumatic actuator rod.

Failure to observe this recommendation could result in the detectors failing to work correctly.


4.4.1. Butterfly/ball valve with pneumatic drive. Figure 4.4

- It is very important to keep the minimum distance (dimension figure A) for pneumatic drive butterfly valves in order to enable the stripping of the actuator.
- Should the head be fitted over another valve, it is extremely important to remember that enough space must be left in
 order to be able to strip the valve for maintenance. The minimum recommended distance to enable the carrying-out of
 head maintenance work would be dimension figure B.

4.4.2. Multi-way valve. Figure 4.4

- With respect to multi-way valves, cutoff valves must be distinguished from tank bottom valves.
- In the event of installing the head over another valve, it is important to remember that enough space must be left in order to be able to strip the valve for maintenance. The minimum recommended distance to enable the carrying-out of head maintenance work would be dimension figure B.



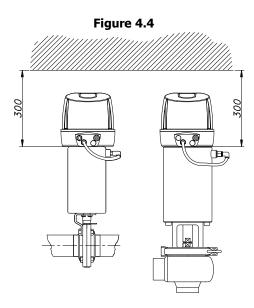




Proceed with due care. Failure to do so may result in personal injuries.

The assembly and stripping of the control head must only be carried out by qualified personnel.

4.5. FITTING THE HEAD 4.5.1. Fitting

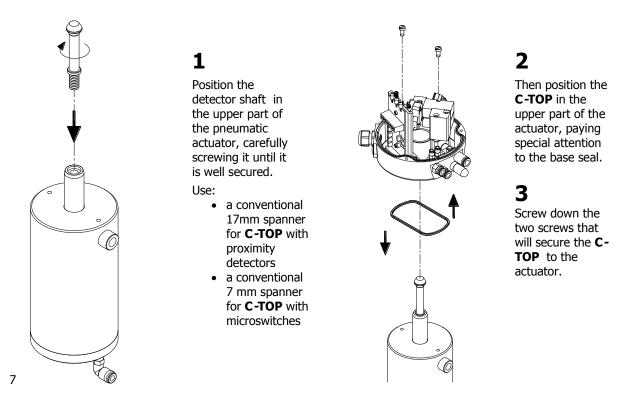




Before putting the valve into operation, check to make sure that the head is tightly secured to the valve and that there are no loose parts.

Only a cross-point screwdriver is needed to fit the head.

R



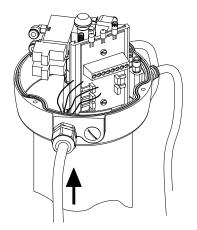


4

6

Fit the electric wiring, in the basic version and connect the C-TOP electrically. (See electrical connections 4.6) Check to make

sure that the wire guide is good and tight.

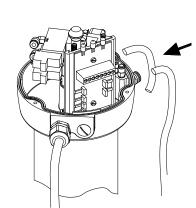


5


Connect the ø6 mm. pipes for the air to the **C-TOP** (See *pneumatic* connections 4.7).


4.5.3. Adjusting the position detectors

In order to place the detectors at the operating position (or detection position, the regulating screw for each detector must be tightened:

- screw clockwise to raise the detector.
- screw anti-clockwise to lower the detector.

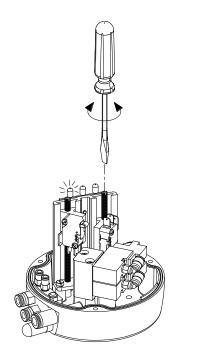

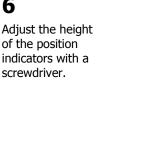

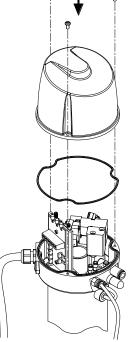

Make sure all of the connections (both the air and electrical connections) are properly coupled, cover the C-TOP, making sure to position the seal correctly, then tighten the three screws appropriately.

7

This operation must always be carried out with the head connected to the mains, given that as soon as the detection position has been reached, the status LED indicator will come on. Carry out the adjustment operation for each one of the head position indicators.



After doing maintenance work on the heads, ALWAYS put the cover back in order to protect the internal electrical components.



4.6. ELECTRICAL CONNECTION 4.6.1. 4.6.1 Mains voltage

The **C-TOP** control head has been designed to be connected to different voltages:

DC or direct current: 24V

AC or alternating current: 24/48/110/220V



The head is supplied from the factory for a predetermined voltage. If the mains voltage proves to be different, the electrical components must be changed (solenoid valves, proximity detectors and electric plate).

4.6.2 Electrical components

All the electrical components used in the **C-TOP** head have a built-in pluggable connector which avoids having to carry out any further interventions or wiring. The printed wiring board has, as a standard feature, the capacity to plug in up to 3 solenoid valves (V1, V2, V3) and 3 proximity detectors or microswitches (S1, S2, S3).

The default assembly is as follows:

Output:

24V – general output (+ pole for DC) **GND** – normal or mass for DC.

24/48/110/220 V (2 wires) for alternating current, either of the wires can be connected.

Solenoid valves:

signal inputs, to the control panel or PLC

- V1 first solenoid valve (Simple Effect drive)
- V2 second solenoid valve (Double Effect drives)
- V3 third solenoid valve (MixProof drives)

Detectors:

signal outputs, to the control panel or PLC

- S1 Open valve detector position (Green LED)
- S2 Closed valve detector position (Red LED)
- **S3** MixProof valve detector position (Yellow LED)


4.7. AS-INTERFACE ELECTRIC CONNECTION

AS-i interface is a fieldbus system that allows to interconnect a net of actuators and binary sensors (slaves) with a control device of a higher level (Master). The interconnection is carried out by means of a preformed cable. The preformed cables serve for information transmission as well as for power supply of the solenoid valves and sensors. The AS-i version C-TOP unit must always be installed with inductive switches and direct current of 24V.

The C-TOP AS-i unit is supplied with the totally prepared cabling to avoid any intervention.

The standard option of the connection to bus is by means of a insulation displacement connector with a 2m cable. The AS-i cards with printed circuit are prepared for up to 4 solenoid valves and 4 proximity switches.

4.7.1. Number of connected C-TOP units and maximum length of the bus circuit

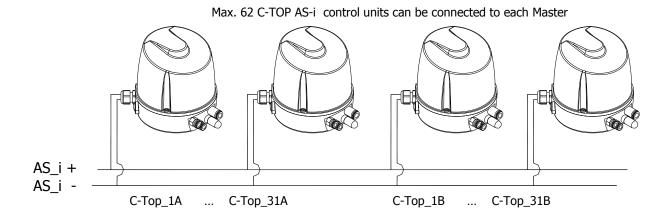

 OPEN
 CLOSE
 LD

 OPEN
 CLOSE
 LD

 OPEN
 CLOSE
 LD

 O
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O

 Q
 O
 O


 Q
 O
 O

 Q
 O
 O

 Q
 O
 O



4.7.2. AS-i card with up to 4 solenoid valves and 4 detectors:

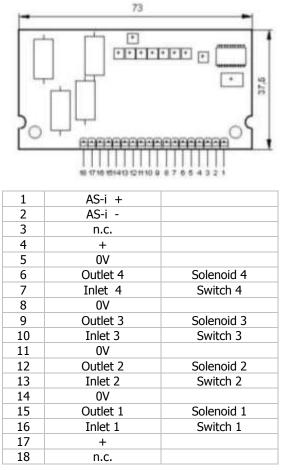

Program:

By default the direction is O, easily reprogrammable by master.


This card is standard for the following heads:

DESCRIPTION	CODE
C-TOP DETECTORES 24V DC 3+1E 3+1D	V9721-4484001AS



4.7.3. AS-i card with up to 3 solenoid valves and 3 detectors:

By default, the assembly is as follows:

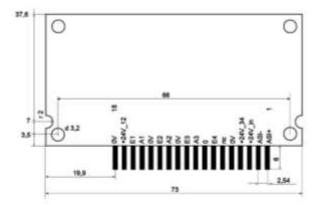

1	AS-i +	
2	AS-i -	
3	n.c.	
4	+	
5	0V	
6	n.c.	
7	Inlet 4	
8	0V	
9	Outlet 3	Solenoid 3
10	Inlet 3	Switch 3
11	0V	
12	Outlet 2	Solenoid 2
13	Inlet 2	Switch 2
14	0V	
15	Outlet 1	Solenoid 1
16	Inlet 1	Switch 1
17	+	
18	n.c.	


This card is standard for the following heads:

DESCRIPTION	CODE
C-TOP DETECTORES 24V DC 2E 3D AS-I	V9721-2384001AS
C-TOP DETECTORES 24V DC 3E 2D AS-I	V9721-3284001AS
C-TOP DETECTORES 24V DC 3E 3D AS-I	V9721-3384001AS



4.7.4. AS-i card with up to 2 solenoid valves and 2 detectors:


By default, the assembly is as follows:

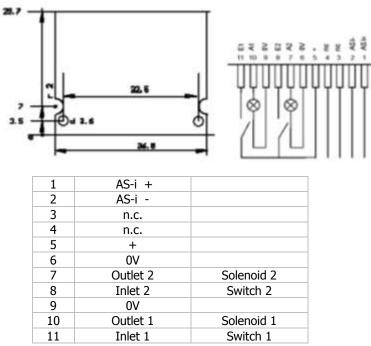

This card is standard for the following heads:

DESCRIPTION	CODE
C-TOP DETECTORES 24V DC 0E 2D AS-I	V9721-0284001AS
C-TOP DETECTORES 24V DC 1E 1D AS-I	V9721-1184001AS
C-TOP DETECTORES 24V DC 1E 2D AS-I	V9721-1284001AS
C-TOP DETECTORES 24V DC 2E 2D AS-I	V9721-2284001AS

4.8. PNEUMATIC CONNECTIONS

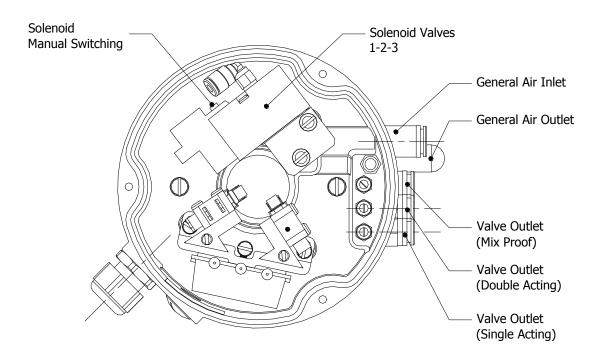

All the air connections are of the rapid type, for ø6 mm piping.



5. Commissioning

Before putting the head (with or without actuator) into operation, the detailed instructions given in chapter 4 – *Reception and Installation* should be read carefully.

5.1. COMISSIONING



Before commissioning, the people who are responsible must be informed as to how the control head works and the safety instructions to be observed. This instruction manual will be readily available to personnel at all times.

Before commissioning the *C*-TOP the following precautions need to be taken:

- The head is properly tightened to the valve/drive. Contrariwise, water could get inside the equipment, either deteriorating it or preventing its use.
- Check that all of the electrical wires have been properly secured in order to avoid possible signal failures.
- Check that the piston and the indicator can move without coming into contact with the position detectors. Make sure that the detectors are at the correct detection height.
- Check that the compressed air pressure at the head inlet is that which is indicated in the *Technical Specifications* in Chapter 8.
- Control the possible air leaks before fitting the cover. Check to make sure that all of the pipes and their connections are well sealed and have no leaks.
- Check that there is power. At least one of the LED's must be on.
- Fit the seal and the cover, securing the same by means of the three screws that have been supplied.

5.2. C-TOP COMMISSIONING

The C-TOP's are prepared for start-up without any interior cabling.

They are supplied with M12 AS-i (Vampire) connector (2 meters long) that allow for an easy connection to the cable.

All the C-TOP AS-i control units are by default supplied with the same direction (0), and each unit of the installation must be redirected from the Master.

There is an option to direct the C-TOP's AS-i at the factory (to be consulted.)



Do not modify the operation settings for which the C-TOP head has been designed without having received prior written authorisation from INOXPA.



Danger of burns! Do not touch the valve or pipes while there is hot liquid in circulation or when cleaning and/or sterilisation work is being carried out.



6. Troubleshooting: Causes and solutions

PROBLEM	CAUSE/EFECT	SOLUTION	
		 Check that the compressed air circuit bypass valve is open. 	
	Insufficient air supply	Check the supply pressure.	
		Insufficient flow.	
THE VALVE IS JERKING		Check the compressed air feed pressure.	
	The actuator is not driving the valve efficiently.	 Replace a pneumatic actuator for a bigger one. 	
	Excessive line pressure	 Check the pressure in the installation and regulate whenever appropriate. 	
	The compressed air feed is not open.	Open the compressed air passage towards the control head.	
	There is not enough air pressure.	• Increase the feed air pressure.	
THE VALVE DOES NOT OPEN/CLOSE	There is air, but the solenoid valve is not working.	 Check that power is being supplied. 	
	Dirt access to the actuator.	 Check the compressed air pressure and the pipes. 	
		Adjust the height of the detectors.	
THERE IS NO POSITION SIGNAL	The detectors do not detect the shaft in position.	 Check to see that the detectors/microswitches are working properly. 	
AIR LEAK	The air is continuously leaking from inside the head	Check all of the pneumatic connections of the head's internal components.	
HAMMERING	The shutoff valve is closing very quickly.	 Fit a flow regulator at the actuator inlet, in order to control the flow speed. 	
WATER HAS GOT INSIDE	Failure of gasket sealability	 Tighten the cover and base screws. Change the base or cover seal, if 	
INGIDE		Change the base of cover seal, if necessary.	

Checks to be made in the event of a breakdown/repair of or to any particular component:

ELECTRICAL (the head must be connected to the mains)

- Check that the proximity detectors are working properly by introducing a metal object into the detection area.
- Check that the microswitches are working properly by activating the lever with your finger.
 - (if the status LED comes on this shows that the detector/microswitch is working properly.)

PNEUMATICS (the compressed air feed must be open).

- Make sure that there are no air leaks at the pneumatic connections.
- Check the proper working of the electrically operated valves by activating them manually.



7. Maintenance

7.1. GENERAL COMMENTS

This control head does not require maintenance work. Should any component fail to work please contact the supplier so as to order spare parts.



Read carefully Chapter 8. *Technical Specifications*.



All electrical work must be carried out by qualified personnel.

7.2. STORAGE

The **C-***TOP* head valves must be stored in an enclosed area in the following conditions:

- Temperature from 5°C to 30°C
- Air humidity <60%

The equipment must **NOT** be stored in the open air.

7.2.1. 7.3. CLEANING



The use of aggressive cleaning products such as caustic soda and nitric acid may give rise to skin burns.

Use rubber gloves during the cleaning process.



When cleaning the head, use non-aggressive liquids that are compatible with the material from the components of the equipment are made. Check that all the cavities are free from dirt.

Monitor the concentration of cleaning solutions, it could give rise to deterioration in the base or the head cover.

In order to remove any remains of cleaning products, ALWAYS rinse the element in question with clean water after completing the cleaning process.

7.4. ASSEMBLY AND STRIPPING




INOXPA is not liable for the improper handling of the head control, or of its components. Before starting work on stripping the equipment, disconnect the actuator air and the head from the mains.

7.4.1. Replacing the head

See *Chapter 4.5*. for instructions on the stripping and fitting of the valve drive head.

7.4.2. Repairs

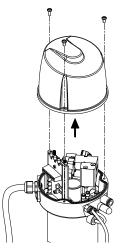

Take off the head cover by loosening the securing screws.

The type of head, its position and the description of the part given in the chapter on technical specifications must be quoted whenever ordering spare parts.

As soon as the piece has been replaced, re-fit the head and make sure that the screws have been tightened properly. Contrariwise, the protection of the electrical components may be considerably reduced.



8. Technical Specifications

8.1. TECHNICAL SPECIFICATIONS

MATERIALS

Base	PPO + GF, blue
Cover	PC, transparent, blue-grey
Seals	EPDM
Weight	560 – 640 gr.

PNEUMATIC SPECIFICATIONS

Connections	Air inlet:	G 1/8" – is supplied with snap-fit plug for 6/4 pipe		
	Air vent:	G 1/8" – is supplied with silencer		
	Air outlets:	G 1/8" – is supplied with snap-fit plug for 6/4 pipe		
Fluid	lubricated co	mpressed air, neutral gasses according to DIN ISO 8573-1		
Cont. max. oil	1 ppm			
Fluid max. temp	50°C (155°F)			
Work pressure	1.5 to 7 bar (22 to 102 PSI)			
Nominal flow	150 Nl/min	(to 6 bar, 20°C and 1 bar differential pressure)		
		(to 87 PSI, 74°F and 87 PSI differential pressure)		
Run	minimum	3 mm		
	maximum	70 mm		

ELECTRICAL SPECIFICATIONS

Protection Supply voltage	IP 65/67 according to EN 60529		
	DC	24V or by means of AS-i bus	
	AC	24/110/220V	
Connections		l terminals with M16 cable gland (standard version) connector	

Solenoid valves:

(the C TOP can fit up to 3 solenoid valves.)

Туре	3/2 Valve (normally closed)
Air pressure	1.5 to 7 bar (22 PSI a 101,5 PSI)
Consumption	DC: 0.55 W
	AC: 1.9 VA
Response time	≤ 25 ms
Optical indicator	Red Led
Peak suppressor circuit	

Position indicators (Inductive)

Voltage	525V DC PNP
Consumption	2,1 mA
(signal)	
Protection	IP 67



In order to assure the good valve performance, it is essential that the compressed air be supplied in accordance with the conditions described herein. Contrariwise, irreparable damage may be caused to the material.





8.2. CHARACTERISTICS

Connection	solenoid valves	num. Detectors (¹)	Voltage	Description	CODE
	0	2 proximity detectors	24V DC		V9721-0284000
	1				V9721-1284000
	2				V9721-2284000
Connectors	3			Control head with printed circuit board.	V9721-3284000
Connectors	0		24V DC	Power is supplied directly to the connectors. M16 cable gland.	V9621-0284000
	1	2 microswitches		connectors. The cable gland.	V9621-1284000
	2	2 microswitches	(²)		V9621-2284000
	3				V9621-3284000
	0	2 proximity detectors	24V DC	Control head with printed circuit board. Factory pre-wired electrical connections. Electrical connection brought about via	
	1				
	2				
Multipin	3				
Marapin	0	2 microswitches	24V DC (²)		
	1				
	2				
	3				
	0	2 proximity detectors	24V DC	Control head with printed circuit board.	V9721-0284000AS
AS-i BUS	1			Direct head connection by means of a	V9721-1284000AS
(³)	2			Direct connection from the head by means of a <i>guillotine</i> plug to the two-	V9721-2284000AS
	3			wire field bus signal cable.	V9721-3284000AS

 $(^1)$ it can be supplied with another number of detectors: from 0... to 3 $(^2)$ there are other versions (alternating current feed 24/110/220V AC 50/60 Hz). $(^3)$ only supplied with inductive proximity detectors.

8.3. DIMENSIONS

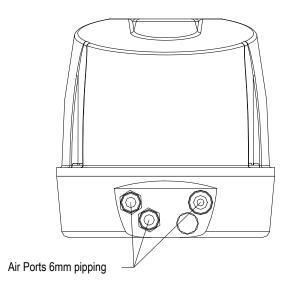


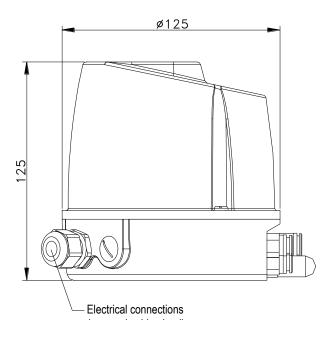



8.4. EXPLODED VIEW AND PARTS LIST

CTOP with 2 proximity detectors and 1 solenoid valve (connector electrical connections) 24/110/220V AC/DC

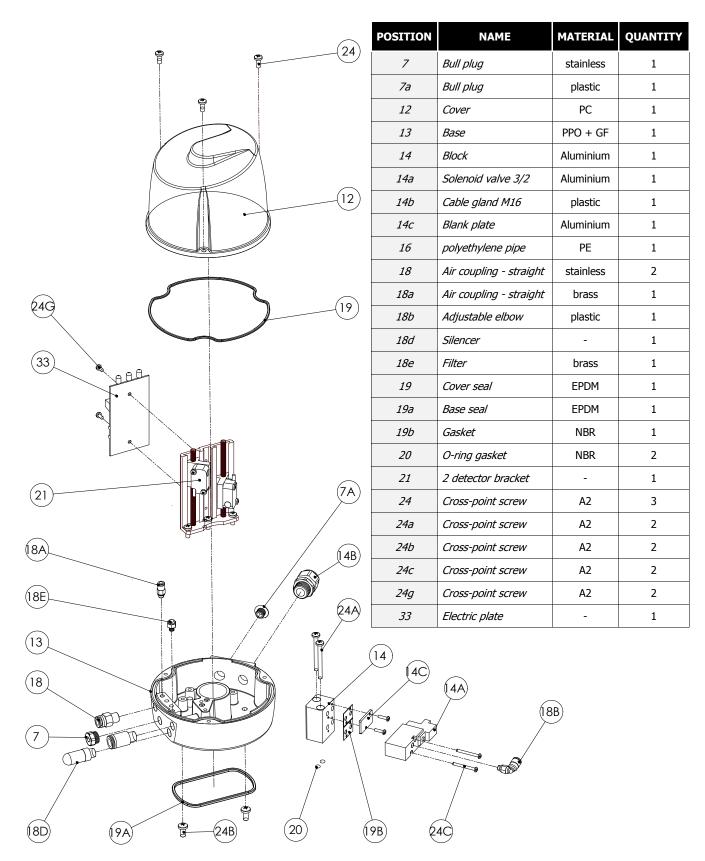

The microswitch version has the same parts. Only one part is different 21. The electric plate (33) and the solenoid valves (14A) vary according to the voltage of the head in question



	POSITION	NAME	MATERIAL	QUANTITY
24	7	Bull plug	stainless	1
	Та	Bull plug	plastic	1
O U	12	Cover	PC	1
	13	Base	PPO + GF	1
	14	Block	Aluminium	1
	14a	Solenoid valve 3/2	Aluminium	1
	14b	Cable gland	plastic	1
	14c	Blank plate M16	Aluminium	1
	16	¢4 polyethylene pipe	PE	1
	18	Air coupling - straight	stainless	2
	18a	Air coupling - straight	brass	1
	18b	Adjustable elbow	plastic	1
249	18d	Silencer	-	1
	18e	Filter	brass	1
	19	Cover seal	EPDM	1
	19a	Base seal	EPDM	1
	19b	Gasket	NBR	1
	20	O-ring gasket	NBR	2
a star	21	2 detector bracket	-	1
	24	Cross-point screw	A2	3
	24a	Cross-point screw	A2	2
(14B)	24b	Cross-point screw	A2	2
	24с	Cross-point screw	A2	2
(18E) (24A)	24g	Cross-point screw	A2	2
	33	Electric plate	-	1
		(14A) (18	В	
(8D) (19A) (24B) (20)	(19B)	240		

CTOP with 2 proximity detectors and 2 solenoid valves (connector electrical connections) 24/110/220V AC/DC

The microswitch version has the same parts. Only one part is different 21. The electric plate (33) and the solenoid valves (14A) vary according to the voltage of the head in questio



INOXPA, S.A. c/ Telers, 54 – PO Box 174 17820 BANYOLES (GIRONA) Tel: 34 972575200 Fax: 34 972575502 e-mail: inoxpa@inoxpa.com www.inoxpa.com

DELEGACIÓN LEVANTE

PATERNA (VALENCIA) Tel: 963 170 101 Fax: 963 777 539 e-mail: inoxpa.levante@inoxpa.com

LA CISTÉRNIGA (VALLADOLID) Tel: 983 403 197 Fax: 983 402 640 e-mail: sta.valladolid@inoxpa.com

INOXPA SOLUTIONS LEVANTE

PATERNA (VALENCIA) Tel: 963 170 101 Fax: 963 777 539 e-mail: isf@inoxpa.com

ST. SEBASTIEN sur LOIRE Tel/Fax: 33 130289100 e-mail: inoxpa.fr@inoxpa.com

INOXPA ALGERIE

ROUIBA Tel: 213 21856363 / 21851780 Fax: 213 21854431 e-mail: inoxpalgerie@inoxpa.com

INOXPA UK LTD

SURREY Tel: 44 1737 378 060 / 079 Fax: 44 1737 766 539 e-mail: inoxpa-uk@inoxpa.com

INOXPA SKANDINAVIEN A/S

HORSENS (DENMARK) Tel: 45 76 286 900 Fax: 45 76 286 909 e-mail: inoxpa.dk@inoxpa.com

INOXPA SPECIAL PROCESSING

EQUIPMENT, CO., LTD. JIAXING (China) Tel.: 86 573 83 570 035 / 036 Fax: 86 573 83 570 038

INOXPA WINE SOLUTIONS

VENDARGUES (FRANCE) Tel: 33 971 515 447 Fax: 33 467 568 745 e-mail: frigail.fr@inoxpa.com / npourtaud.fr@inoxpa.com

DELEGACIÓN NORD-ESTE /

BARBERÀ DEL VALLÈS (BCN) Tel: 937 297 280 Fax: 937 296 220 e-mail: inoxpa.nordeste@inoxpa.com

DELEGACIÓN CENTRO

ARGANDA DEL REY (MADRID) Tel: 918 716 084 Fax: 918 703 641 e-mail: inoxpa.centro@inoxpa.com

LOGROÑO Tel: 941 228 622 Fax: 941 204 290 e-mail: sta.rioja@inoxpa.com

INOXPA SOLUTIONS FRANCE

GLEIZE Tel: 33 474627100 Fax: 33 474627101 e-mail: inoxpa.fr@inoxpa.com

WAMBRECHIES Tel: 33 320631000 Fax: 33 320631001 e-mail: inoxpa.nord.fr@inoxpa.com

INOXPA SOUTH AFRICA (PTY) LTD

JOHANNESBURG Tel: 27 117 945 223 Fax: 27 866 807 756 e-mail: sales@inoxpa.com

S.T.A. PORTUGUESA LDA

VALE DE CAMBRA Tel: 351 256 472 722 Fax: 351 256 425 697 e-mail: comercial.pt@inoxpa.com

IMPROVED SOLUTIONS

VALE DE CAMBRA Tel: 351 256 472 140 / 138 Fax: 351 256 472 130 e-mail: isp.pt@inoxpa.com

INOXRUS MOSCOW (RUSIA) Tel / Fax: 74 956 606 020 e-mail: moscow@inoxpa.com

INOXPA UCRANIA

KIEV Tel: 38 050 720 8692 e-mail: kiev@inoxpa.com ZARAGOZA Tel: 976 591 942 Fax: 976 591 473 e-mail: inoxpa.aragon@inoxpa.com

DELEGACIÓN STA

GALDACANO (BILBAO) Tel: 944 572 058 Fax: 944 571 806 e-mail: sta@inoxpa.com

DELEGACIÓN SUR JEREZ DE LA FRONTERA (CÁDIZ) Tel / Fax: 956 140 193 e-mail: inoxpa.sur@inoxpa.com

CHAMBLY (PARIS) Tel: 33 130289100 Fax: 33 130289101 e-mail: isf@inoxpa.com

INOXPA AUSTRALIA PTY (LTD)

MORNINGTON (VICTORIA) Tel: 61 3 5976 8881 Fax: 61 3 5976 8882 e-mail: inoxpa.au@inoxpa.com

INOXPA USA, Inc SANTA ROSA Tel: 1 7075 853 900 Fax: 1 7075 853 908 e-mail: inoxpa.us@inoxpa.com

INOXPA ITALIA, S.R.L. BALLO DI MIRANO – VENEZIA Tel: 39 041 411 236 Fax: 39 041 5128 414 e-mail: inoxpa.it@inoxpa.com

INOXPA INDIA PVT. LTD. Maharashtra, INDIA. Tel: 91 2065 008 458 inoxpa.in@inoxpa.com

SAINT PETERSBURG (RUSIA) Tel: 78 126 221 626 / 927 Fax: 78 126 221 926 e-mail: spb@inoxpa.com

In addition to our branches, INOXPA has a network of independent distributors that covers over 50 countries worldwide. For further information visit our web page. www.inoxpa.com The information is for guidance only. We reserve the right to change any material or characteristic without prior notice.